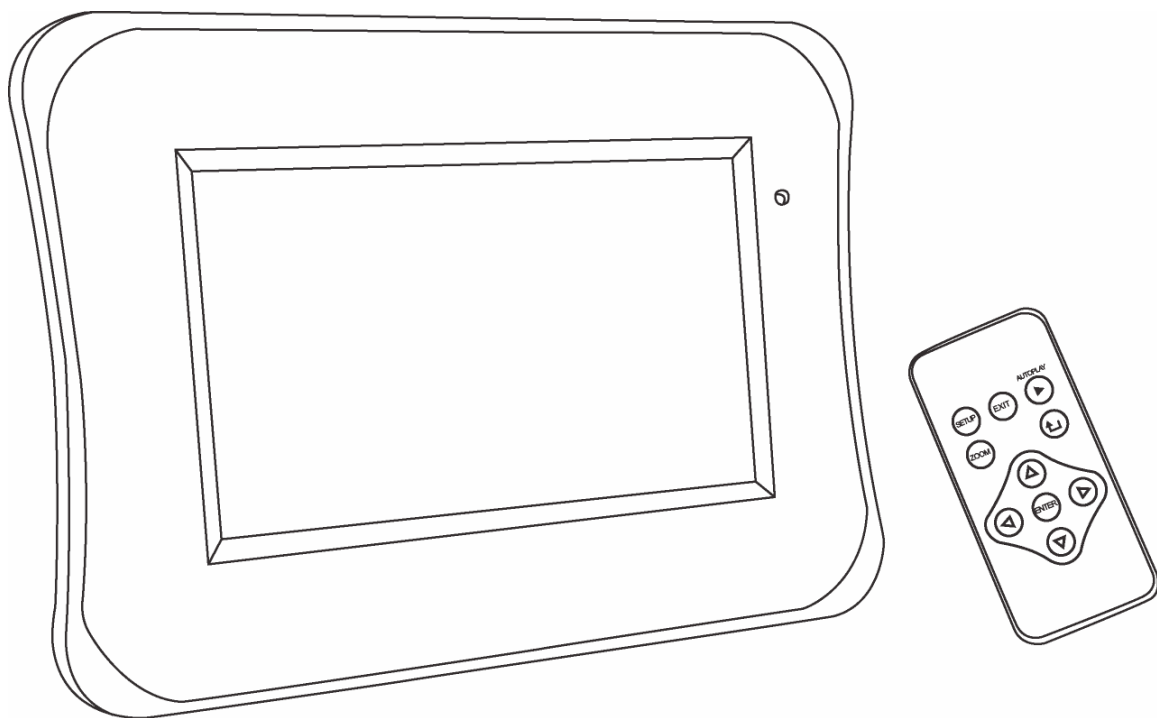 




Digital Photo Frame 7" LCD

Model #: 7DPF200



User's Manual

All brand name and trademarks are the property of their respective owners

USER'S RECORD:

To provide quality customer service and technical support, it is suggested that you keep the following information as well as your store receipt and this user's manual.

Date of Purchase: _____

Model Number: _____

Serial Number: _____

Product Rev Number (located below the UPC on the package): _____

FCC RADIATION NORM:

FCC

This equipment has been tested and found to comply with limits for Class B digital device pursuant to Part 15 of Federal Communications Commission (FCC) rules.

FCC Compliance Statement

These limits are designed to provide reasonable protection against frequency interference in residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed or used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in television reception, which can be determined by turning the equipment off and on. The user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected to.



CAUTION!

The Federal Communications Commission warns the user that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PACKAGE CONTENTS:

Your new Digital Photo Frame will ship with the following items.

- Digital Photo Frame 7" LCD
- Remote Control
- AC Power Adapter
- USB Cable
- User's Manual
- Warranty Information

SYSTEM SPECIFICATIONS:

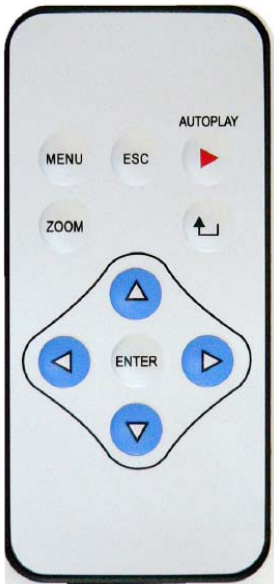 
 
 
 
Your new Digital Photo Frame complies with the following specifications.

- Screen Dimensions: 7.0 inches
- Resolution: 480 x 234
- Brightness: 250 cd/m²
- Contrast: 200:1
- Photo File Format: JPEG
- Memory Card Formats: SD, MMC, MS, or CF
- Usage Options: Manual, Remote Control, or Slideshow
- Power Supply: AC 100~120V DC 12V
- Operating Temperature: -5C to +50C
- Max Power Consumption: 12W
- Supported Operating Systems: Windows[®] 2000, XP, Vista, Mac[®] OS 10.3 or Above


HARDWARE DESCRIPTION:



Remote Control

	MENU	Press to open the control menu when a photo is being displayed manually.
	ESC	Press to exit a setup screen, AUTOPLAY, or go back to the previous screen.
	AUTOPLAY	Press to display photos one by one at a preset interval. NOTE: When this function is running, all other buttons will not function except “ ESC ”.
	ZOOM	Press to zoom in while a photo is displayed manually.
		Press to rotate the photo clockwise 90 degrees while a photo is displayed manually.
	ENTER	Press to select an option or a photo. Press to save a changed setting in the setup screen.
		Press to navigate up and down or to view previous or next photos while photo is being displayed manually. These buttons can also be used to move the photo up or down after a photo has been zoomed in.
		Press to navigate left and right or move the photo to the right or left after a photo has been zoomed in.

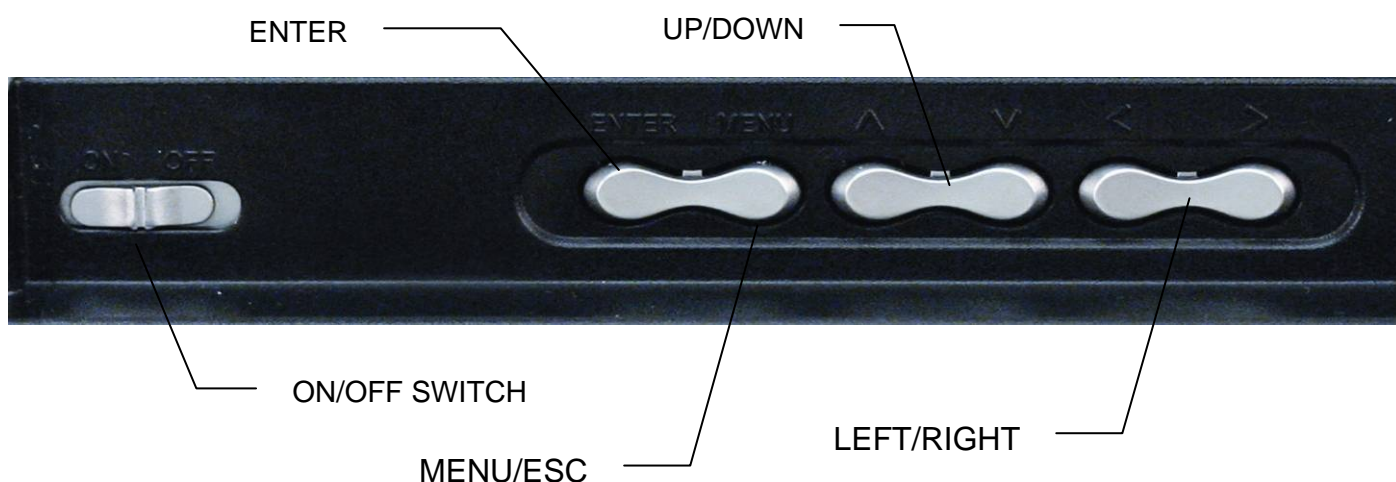 Built-in Control



ON/OFF SWITCH	Power ON/OFF
ENTER	Press to select an option or a photo. Press to save a changed setting in the setup screen.
MENU/ESC	Press and hold to open the setup screen or the control menu when a photo is being displayed manually. Press to function as the “ ESC ” button on the Remote Control.
UP/DOWN	Press to navigate up and down or to view previous or next photos while photo is being displayed manually. These buttons can also be used to move the photo up or down after a photo has been zoomed in.
LEFT/RIGHT	Press to navigate left and right or move the photo to the right or left after a photo has been zoomed in.

HARDWARE INSTALLATION:

1. Attach the enclosed Stand onto the back of your Digital Photo Frame with a screw driver (not included).



2. Connect the power jack of the enclosed AC Power Adapter to your Digital Photo Frame, and plug the other end into an electric outlet.



3. Place your Digital Photo Frame on a flat and steady surface.
4. Your Digital Photo Frame is now ready to be used.

USING THE DIGITAL PHOTO FRAME:

1. Make sure that you have properly connected the AC Power Adapter; refer to the Hardware Installation instructions above if necessary.

2. Carefully insert your memory card into the proper slot as shown below following the orientation guide on the memory card.








3. Turn on your Digital Photo Frame and the below screen will appear.




4. Use the enclosed Remote Control or the Built-in Control and select the icon on the left to enter the Card Selection Menu. Choose the media card you want to view; the photos stored in the selected card will be displayed on the screen as thumbnails. 12 thumbnails can be shown on screen at one time.



5. Select the photo you want to view by pressing the “**Enter**” button on the Remote Control or on the Built-in Control. Pressing the “**MENU**” button on the Remote Control will show the options below.

	Zoom in.
	Zoom out.
	Rotate photo clockwise 90 degrees.
	Rotate photo counterclockwise 90 degrees.
	Opens the “ Settings ” Menu.

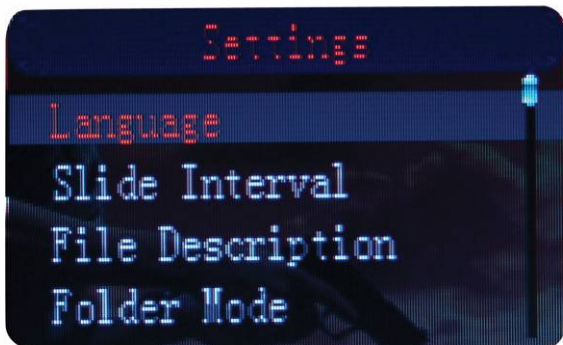 6. Select the “**Settings**” icon to open the “**Settings**” Menu.



Language	Select this to choose the language you want your “ Settings ” menu to be.
Slide Interval	Select this to set the time interval between pictures for “ AUTOPLAY ” mode. The time limit can vary from 3 seconds to 60 seconds.
File Description	Enabling this option will show the file name and order of the files being displayed onscreen.
Folder Mode	Enabling this option will show the folders in the memory instead of displaying all of the photos as thumbnails at the same time.
Aspect Ratio	Select this to have the photos displayed at the ratio of the picture or by expanding to the full screen size of your Digital Photo Frame.
LCD Power Saving	Select this to set the “ LCD power saving ” mode. Select the time for your Digital Photo Frame to turn off automatically according to the time limit, or select “ Off ” to disable this function.
Default Setting	Select this to change all settings back to factory default settings.
System Information	Select this to show the system information for your Digital Photo Frame.

CONNECTING TO A COMPUTER:

1. Make sure all memory cards have been removed from your Digital Photo Frame.
2. Turn on your computer.
3. Plug the USB mini-B connector end of the enclosed USB Cable to your Digital Photo Frame.



4. Plug the USB-A connector end of the USB Cable into an available USB port on your computer.



5. Your computer will detect and install the necessary drivers automatically.
6. Your Digital Photo Frame can now be used as a Card Reader.



Gear Head, LLC warrants that this product shall be free from defects in materials and workmanship one year. If the product is defective, Gear Head, LLC's sole obligation under this warranty shall be at its election, subject to the terms of this warranty, to repair or replace any parts deemed defective. This warranty is for the exclusive benefit of the original purchaser and is not assignable or transferable. THIS WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE TERMS OF THIS WARRANTY, UNLESS OTHERWISE PROHIBITED BY LAW.

Exclusions

To the fullest extent permitted by law, Gear Head, LLC expressly disclaims and excludes from this warranty any liability for damages, including but not limited to general, special, indirect, incidental, consequential, aggravated, punitive or exemplary damages, and economic loss (even if Gear Head™ is informed of their possibility), third party claims against you, including for any loss or damages, and claims or damages related to loss of, or, damage to, your records or data. This warranty does not apply to any product the exterior of which has been damaged or defaced. This warranty will be voided by misuse, improper physical environment, improper repair, acts of God, war or terror, commercial use, and improper service, operation or handling.

Technical Support

Gear Head™ provides Technical Support Monday - Friday from 9:00 am – 5:30 pm Eastern Time. Before calling, please make sure you have available the Model # (located on the front page of your User's Manual) and information regarding your computer's operating system.

Please contact our technicians at

1-866-890-7115

Return Merchandise for Service

Any claim under this warranty must be made in writing to Gear Head, LLC, at the address provide by our technician, within 30 days after the owner discovers the circumstances giving rise to any such claim, and must include a copy of this warranty document, a receipt or copy of your invoice marked with the date of purchase, and the original packaging. You may obtain service by calling the technician for a Return Merchandise Authorization (RMA) number. The RMA number must be prominently displayed on the outside of the shipping carton and the package must be mailed to Gear Head™ postage prepaid.