




USB 2.0 SIM/Micro SD & T-Flash Card Reader

Model #: CR6300

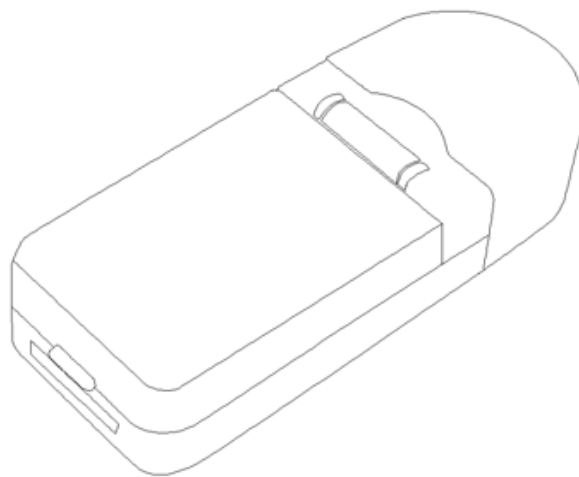

User's Manual

All brand name and trademarks are the property of their respective owners

USER'S RECORD:

To provide quality customer service and technical support, it is suggested that you keep the following information as well as your store receipt and this user's manual.

Date of Purchase: _____

Model Number: _____

Serial Number: _____

Product Rev Number (located below the UPC on the package): _____

FCC RADIATION NORM:

FCC

This equipment has been tested and found to comply with limits for Class B digital device pursuant to Part 15 of Federal Communications Commission (FCC) rules.

FCC Compliance Statement

These limits are designed to provide reasonable protection against frequency interference in residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed or used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in television reception, which can be determined by turning the equipment off and on. The user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected to.



CAUTION!

The Federal Communications Commission warns the user that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PACKAGE CONTENTS:

Your new card reader will ship with the following items:

- USB 2.0 SIM/Micro SD & T-Flash Card Reader
- Software Mini SC
- User's Manual
- Warranty Information

SYSTEM REQUIREMENTS:

Please be sure that you meet all of the system requirements below to avoid difficulties during installation:

- 100% PC Compatibles
- Windows® 2000, XP, and Vista
- Available USB 2.0 Port
- Optical Drive (for software installation, slot loading drive not supported)

INSERTING MEMORY CARDS:

NOTE: The pictures shown in this User's Manual are for demonstration purposes only. Your computer or product may look slightly different. Please follow the slot guide on your card reader to make sure the memory cards are inserted in their matching slots. Your card reader can read only one card at a time.

For the inner card storage compartment: SIM card



For the lower slot: Micro SD card




SOFTWARE INSTALLATION:


NOTE: The included software is for Windows® Operating Systems only. Please do not try to install the software on Mac® operating systems.

For Windows® 2000®, XP, Vista

1. Turn on your computer.
2. Insert the enclosed driver CD into your CD-ROM drive, select the folder that matches your operating system, double-click “**setup**” icon, the following screen will appear, click “**Install**”.

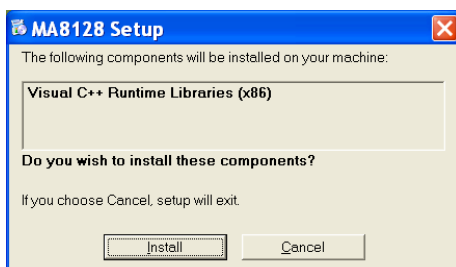

3. Follow the onscreen instructions to complete the software installation. When the driver installation finish, the following screen will show up, click “**Close**” to exit.

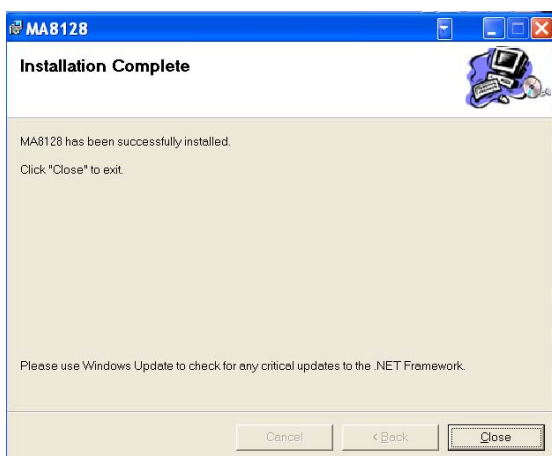


4. You will find the “**GSimReader APP**” icon under “**All Programs**”.

USING THE SOFTWARE:

NOTE: The software is for editing your phone book stored on your SIM card.

1. Make sure your SIM card is installed in your card reader. Plug your card reader into an available USB port of your computer.
2. Open “**GSimReader APP**” under “**All Programs**”, the following screen will appear on your desktop.

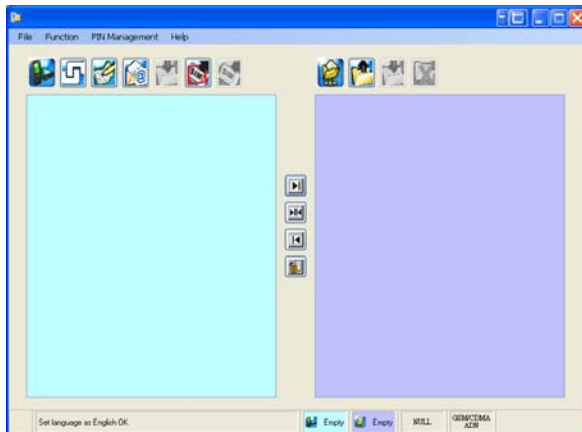

Menu	File	In this drop-down menu, you can open a Text File from your computer, print and save the file after you have edited it in the File Operation area. You can also exit the program by clicking “ Close ” in the drop-down menu.	
	Function	Select “ Phone book ” or “ Short Message Service ” in this drop-down menu, data of your phone book or short message record from your SIM card will be displayed in the SIM Operation area.	
	PIN Management	If you have use your phone or your Phone Service Provide has enabled the PIN function of your SIM Card, you will need to use “ PIN Verify ” function to enable the software to read your SIM or use the “ PIN Request ” function to turn on/off PIN function. Note: most SIM card do not have the PIN function enabled. To avoid incompatibility issues, the “ Change Code ” function for changing the PIN of your SIM Card is disabled. Please use your phone to enable PIN.	
	Help	Click to show the version of this program.	
Buttons	SIM Operation: It offers six tools to edit the file opened under the SIM Operation area. 		Click to initiate communication with your SIM card. Note: Some older version SIM cards can't be initiated using this button. Please try the “Specific Read” button.
			Click to open your phone book from your SIM card.
			Click to open the short message record from your SIM card.
			Save the records read from your SIM Card to your computer.

			Click this icon to read some older version SIM cards or when "Initiate SIM Card" is not able to read your SIM card.
			Save the data you have changed to your SIM card.
	File Operation: It offers three tools to edit the file opened under the File Operation area. 		Open a file stored on your computer.
			Save the edited file to your computer.
			Delete selected data from the file.
	Edit		Resplace data in the File Operation area with data in the SIM Operation area.
			Synchronize information between the file in the SIM Operation area and the one in the File Operation area.
			Resplace data in the SIM Operation area with data in the File Operation area
			Add data from the SIM Operation area to the bottom of the File Operation area.

SAFELY REMOVING USB DEVICES:

To prevent any loss of data and/or hardware damage you must safely remove your USB device from your computer, please follow the instructions below:

 
For Windows 2000®, XP, Vista

1. Make sure your USB storage device is not in use and there's no activity between your computer and your USB device.
2. Click the **"Safely Remove Hardware"** icon in the system tray on your desktop.

For Windows 2000®, XP



For Windows® Vista



3. Select the USB storage device that you want to remove from the list.



4. After a few second, a message will appear notifying you that it is now safe to remove your USB device from your computer.




5. Now you can safely disconnect your USB storage device from your computer.

UNINSTALLING THE SOFTWARE:


To properly uninstall the software, please follow the instructions below:

1. On your desktop, click “start” in the system tray, click “Control Panel”.

For Windows 2000®, XP

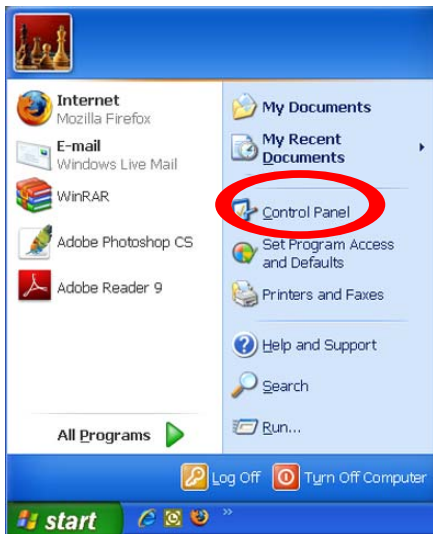


For Windows® Vista

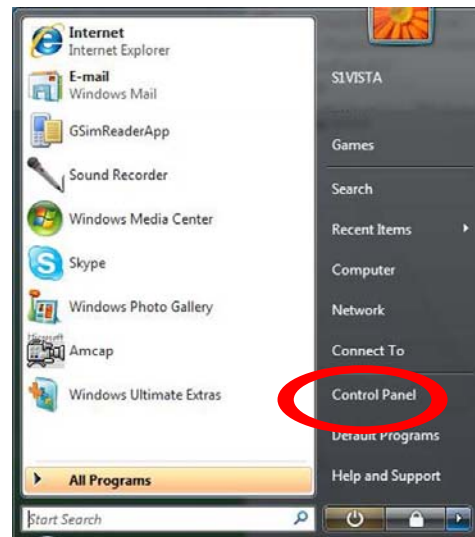

2. Click “Add or Remove Programs” in the screen of Control Panel. For Windows® Vista user, click “Programs and Features”

For Windows 2000®, XP

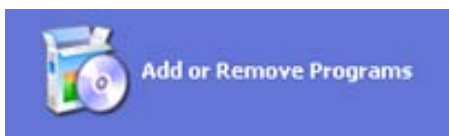


For Windows® Vista




3. All of the programs installed on your computer will be displayed. Find and select “MA8128”, click “Remove”. For Windows® Vista user, right-click “MA8128” and select “uninstall”.

For Windows 2000®, XP

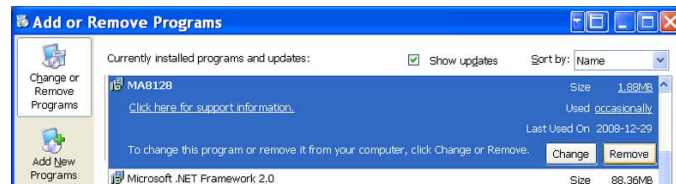


For Windows® Vista

 


4. After the “MA8128” program is removed, find “Microsoft Visual C + + 2005 Redistributable” and select it, click “Remove”. For Windows® Vista user, right-click “Microsoft Visual C + + 2005 Redistributable” and click “uninstall”.

For Windows 2000®, XP

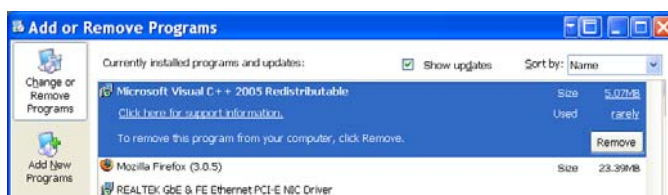

For Windows® Vista

 



WARRANTY INFORMATION:



Gear Head, LLC warrants that this product shall be free from defects in materials and workmanship for the reasonable lifetime of the product. If the product is defective, Gear Head, LLC's sole obligation under this warranty shall be at its election, subject to the terms of this warranty, to repair or replace any parts deemed defective. This warranty is for the exclusive benefit of the original purchaser and is not assignable or transferable. THIS WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE TERMS OF THIS WARRANTY, UNLESS OTHERWISE PROHIBITED BY LAW.

Exclusions

To the fullest extent permitted by law, Gear Head, LLC expressly disclaims and excludes from this warranty any liability for damages, including but not limited to general, special, indirect, incidental, consequential, aggravated, punitive or exemplary damages, and economic loss (even if Gear Head™ is informed of their possibility), third party claims against you, including for any loss or damages, and claims or damages related to loss of, or, damage to, your records or data. This warranty does not apply to any product the exterior of which has been damaged or defaced. This warranty will be voided by misuse, improper physical environment, improper repair, acts of God, war or terror, commercial use, and improper service, operation or handling.

Technical Support

Please access Technical Support on the web or contact our technicians at info@pcgearhead.com for help.

www.pcgearhead.com

Gear Head™ provides phone support, 866-890-7115, Monday - Friday from 9:00 am – 5:30 pm Eastern Time. Before calling, please make sure you have available the Model # (located on the front page of your User's Manual) and information regarding your computer's operating system.

Return Merchandise for Service

Any claim under this warranty must be made in writing to Gear Head, LLC, within 30 days after the owner discovers the circumstances giving rise to any such claim, and must include a copy of this warranty document, a receipt or copy of your invoice marked with the date of purchase, and the original packaging. You may contact us on the web at www.pcgearhead.com or by emailing us at info@pcgearhead.com to receive service or request a return service authorization.