 




# Wireless Desktop & Optical Mouse

Model: KB5000WDR

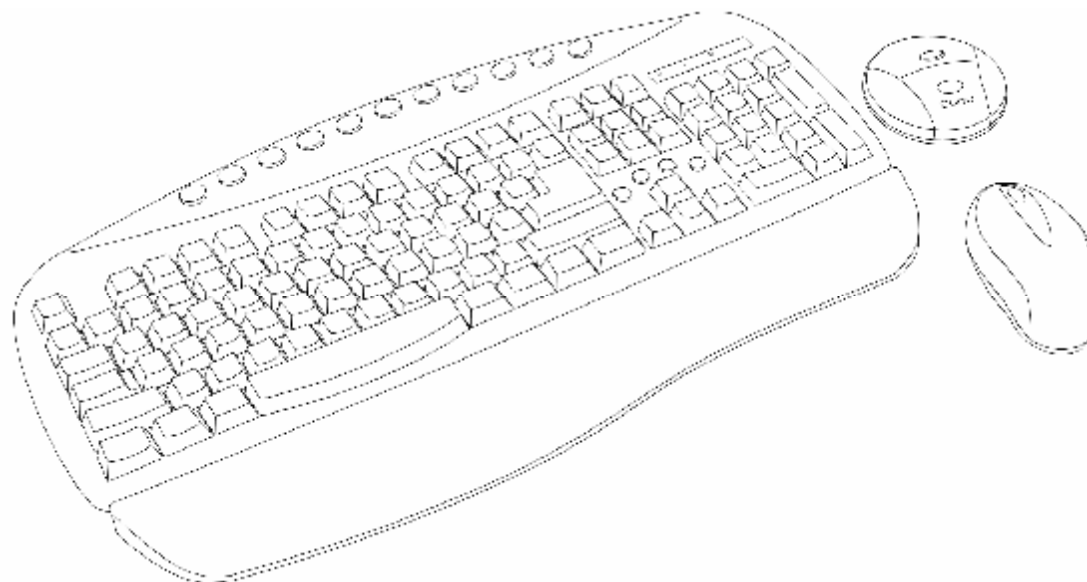

## User's Manual



## User's Record:

To provide quality customer service and technical support, it is suggested that you keep the following information as well as your store receipt and this user's manual.

Date of Purchase:

---

Model Number:

---

Serial Number:

---

Product Rev Number (located below the UPC on the package):

---



## Package Contents:

Your new Wireless Desktop will ship with the following items.

- § Wireless Desktop & Optical Mouse
- § Wired Receiver with Dual PS/2 Connectors
- § Detachable Palmrest
- § 6 AAA Ni-MH Rechargeable Batteries
- § User's Manual
- § Warranty Information

## System Requirements:

Please be sure that you meet all of the system requirements below to avoid difficulties during installation.

- § IBM PCs or 100% Compatibles
- § Windows® ME, 2000, XP
- § 2 Available PS/2 Ports

## System Specifications:


Your new Wireless Desktop complies with the following specifications.

- § PS/2 Interface

# Installation:

**NOTE:** The pictures shown in the User's Manual are for demonstration purposes only. Your computer or product may look slightly different.

1. Turn off your computer.
2. Plug your Receiver into the appropriate **PS/2 Ports** on your computer.

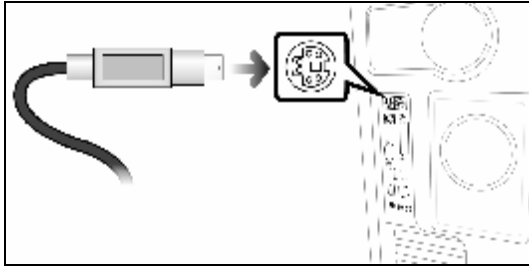


3. Turn on your computer.
4. Your computer will detect your Receiver, and the necessary drivers will be installed automatically.

## Battery Installation:


To install batteries into your Mouse, please follow the instructions below:

- a. Remove the **Battery Compartment Cover** from the bottom of your Mouse.
- b. Install two of the enclosed **AAA Ni-MH Rechargeable Batteries** into the **Battery Compartment** following the battery orientation guide printed inside the compartment.
- c. Replace the **Battery Compartment Cover** back onto your Mouse until it securely locks.
- d. **Your Mouse will establish a connection with the receiver automatically.** If a connection is not established, proceed to the **Establish a Connection** section of this manual.

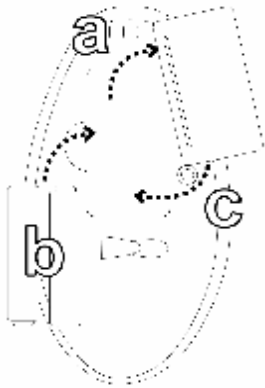


To install batteries into your Keyboard, please follow the instructions below:

1. Remove the **Battery Compartment Cover** from the bottom of your Keyboard.
2. Install two of the enclosed **AAA Ni-MH Rechargeable Batteries** into the **Battery Compartment** following the battery orientation guide printed inside the compartment.
3. Replace the **Battery Compartment Cover** back onto your Keyboard until it securely locks.
4. **Your keyboard will establish a connection with the receiver automatically.** Your keyboard and mouse are now ready to be used. For more information about your special function keys please see the **Special Function Keys** Section of the manual. If a connection is not automatically established, proceed to the **Establish a Connection** section of this manual.

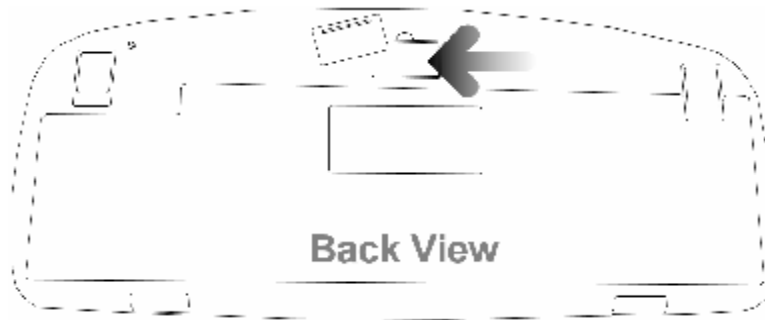


## Establish a Connection:

Press the **Connect Button** on your Wireless Receiver for 6 seconds, the Auto Sync function of your receiver will be activated and will begin searching for your Keyboard and Mouse, an automatic connection will be established between your receiver, mouse and keyboard. If this does not occur please follow the instructions below.

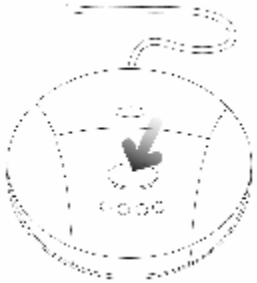


To establish a dedicated connection between your Wired Receiver, Keyboard, Mouse, and computer please follow the instructions below:


Note: An automatic connection may fail if there are more than one KB5000WDR Wireless Desktops operating within a close proximity. The following instructions are for a dedicated connection:

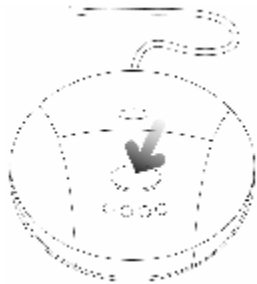

1. Press the **Connect Button** on your Wireless Receiver, and then press the **Connect Button** on the bottom of your Keyboard.

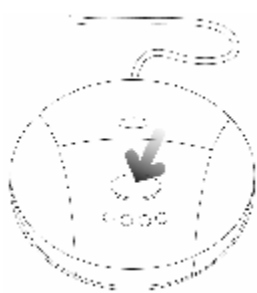

2. Press the **Connect Button** on your Wireless Receiver, and then press the **Connect Button** on the bottom of your Mouse.

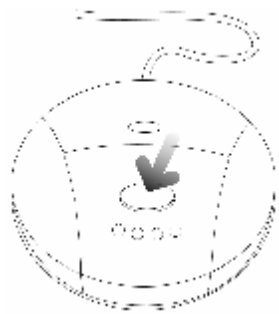

3. Your Keyboard and Mouse are now ready to be used.



## Wired Receiver LED Indicators:


There are four LED Indicators on your Wired Receiver, please see the chart below for a description of each (starting from left to right):

LED Indicator	Status	Description
Signal LED (Green/Red)	Green Solid	If the green LED is solid, your computer is powered on and your Wired Receiver is connected.
	Red Blinking Rapidly	If the red LED blinks rapidly, your Wired Receiver is scanning for a connection to your keyboard and/or mouse.
	Red Blinking	If the red LED blinks, your Wired Receiver has established a connection to your keyboard and/or mouse.
	Red Blinking Slowly	If the red LED flashes, your keyboard and/or mouse is active.
NumLock LED (Red)	Red Solid	If the red LED is solid, number lock is enabled.
CapsLock LED (Red)	Red Solid	If the red LED is solid, caps lock is enabled.
Charge LED (Red)	Off	If the LED is off, no batteries are installed in your Wired Receiver, or the batteries installed are fully charged.
	Red Solid	If the LED is solid red, your Wired Receiver is charging the installed batteries.

# Recharging Your Ni-MH Batteries:

To recharge your Ni-MH Batteries using your Wired Receiver, please follow the instructions below:

1. Make sure your computer is turned on and your Wired Receiver is connected to your computer.
2. Press down and then slide off the **Battery Compartment Cover** from your **Wired Receiver**.
3. Place two Ni-MH Batteries into the **Battery Compartment** following the battery orientation guide printed inside the compartment.

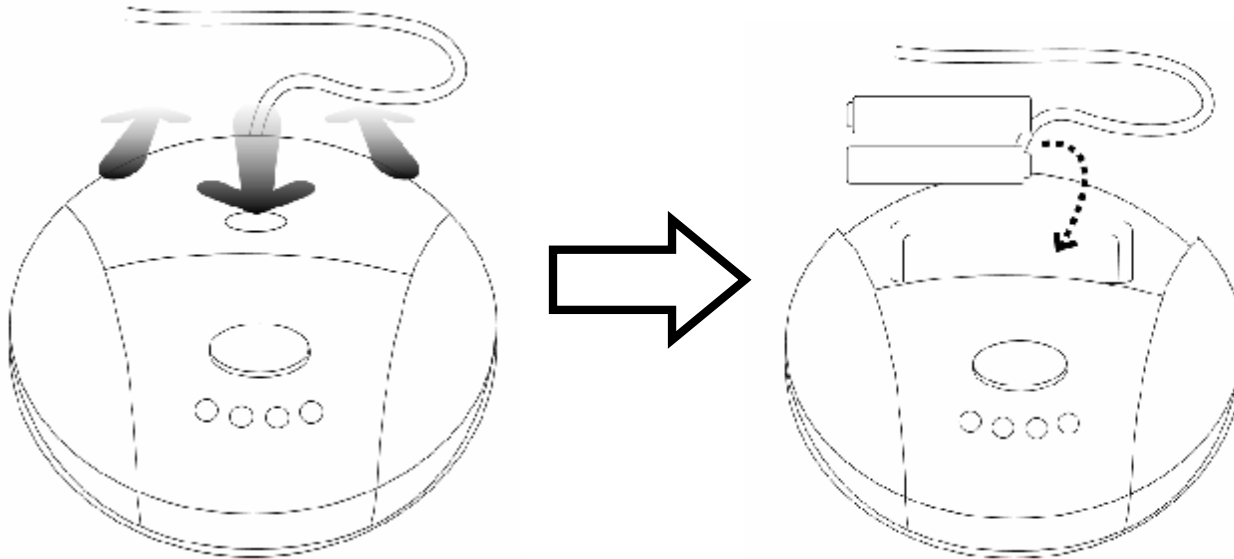












4. Replace the **Battery Compartment Cover** back onto your **Wired Receiver**.
5. The **Charge LED** will turn solid red and the installed batteries will begin charging.
6. When the LED indicator turns off, the batteries are fully charged.





# Special Function Keys:

 
There are 11 pre-programmed special function keys located at the top of your Keyboard, please see the chart below for a description of each key:



 <b>Refresh</b> Press this button to refresh the current page.	 <b>Outlook</b> Press this button to open Microsoft® Outlook Express.
 <b>Favorites</b> Press this button to access your "Favorites" folder.	 <b>Play / Pause</b> When your media player program is open, press this button to play (or pause) the current track.
 <b>Back</b> Press this button to go back to the previous page (if available).	 <b>Stop</b> When your media player program is open, press this button to stop the current track.
 <b>Forward</b> Press this button to go to the next page (if available).	 <b>Mute</b> Press this button to mute the volume on your speakers.
 <b>Stop</b> Press this button to stop loading a page in your default web browser.	 <b>Sleep</b> Press this button to put your computer in sleep mode.
 <b>Home</b> Press this button to go to your homepage in your default web browser.	

There are 4 pre-programmed special function keys located above the arrow keys on your Keyboard, please see the chart below for a description of each key:

	<b>Backward</b> When your media player program is open, press this button to go back to the previous track.
	<b>Volume Down</b> Press this button to decrease the volume of your speakers.
	<b>Volume Up</b> Press this button to increase the volume of your speakers.
	<b>Forward</b> When your media player program is open, press this button to go to the next track.

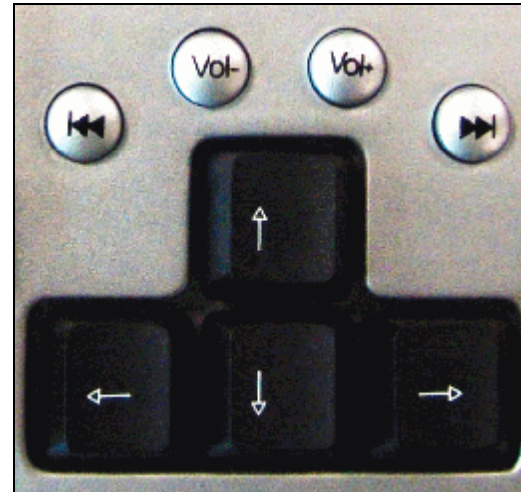





## FCC Information:

### FCC

This equipment has been tested and found to comply with limits for Class B digital device pursuant to Part 15 of Federal Communications Commission (FCC) rules.

### FCC Compliance Statement

These limits are designed to provide reasonable protection against frequency interference in residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed or used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in television reception, which can be determined by turning the equipment off and on. The user is encouraged to try and correct the interference by one or more of the following measures:

- § Reorient or relocate the receiving antenna
- § Increase the separation between the equipment and the receiver
- § Connect the equipment into an outlet on a circuit different from that to which the receiver is connected to.



### CAUTION!

The Federal Communications Commission warns the user that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



## Warranty Information:



Gear Head, LLC warrants that this product shall be free from defects in materials and workmanship for the reasonable lifetime of the product. If the product is defective, Gear Head, LLC's sole obligation under this warranty shall be at its election, subject to the terms of this warranty, to repair or replace any parts deemed defective. This warranty is for the exclusive benefit of the original purchaser and is not assignable or transferable. **THIS WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE TERMS OF THIS WARRANTY, UNLESS OTHERWISE PROHIBITED BY LAW.**

### **Exclusions**

To the fullest extent permitted by law, Gear Head, LLC expressly disclaims and excludes from this warranty any liability for damages, including but not limited to general, special, indirect, incidental, consequential, aggravated, punitive or exemplary damages, and economic loss (even if Gear Head™ is informed of their possibility), third party claims against you, including for any loss or damages, and claims or damages related to loss of, or, damage to, your records or data. This warranty does not apply to any product the exterior of which has been damaged or defaced. This warranty will be voided by misuse, improper physical environment, improper repair, acts of God, war or terror, commercial use, and improper service, operation or handling.

### **Technical Support**

Gear Head™ provides Technical Support Monday - Friday from 9:00 am – 5:30 pm Eastern Time. Before calling, please make sure you have available the Model # (located on the front page of your User's Manual) and information regarding your computer's operating system.

Please contact our technicians at  
1-866-890-7115

### **Return Merchandise for Service**

Any claim under this warranty must be made in writing to Gear Head, LLC, at the address provide by our technician, within 30 days after the owner discovers the circumstances giving rise to any such claim, and must include a copy of this warranty document, a receipt or copy of your invoice marked with the date of purchase, and the original packaging. You may obtain service by calling the technician for a Return Merchandise Authorization (RMA) number. The RMA number must be prominently displayed on the outside of the shipping carton and the package must be mailed to Gear Head™ postage prepaid.